
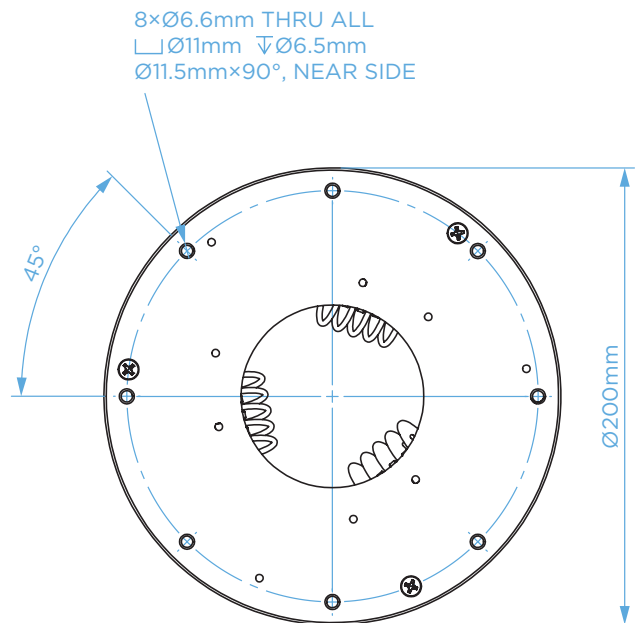
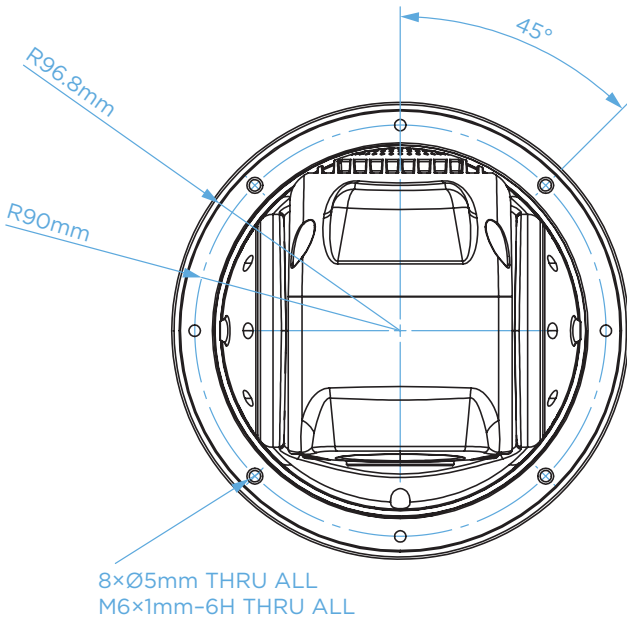
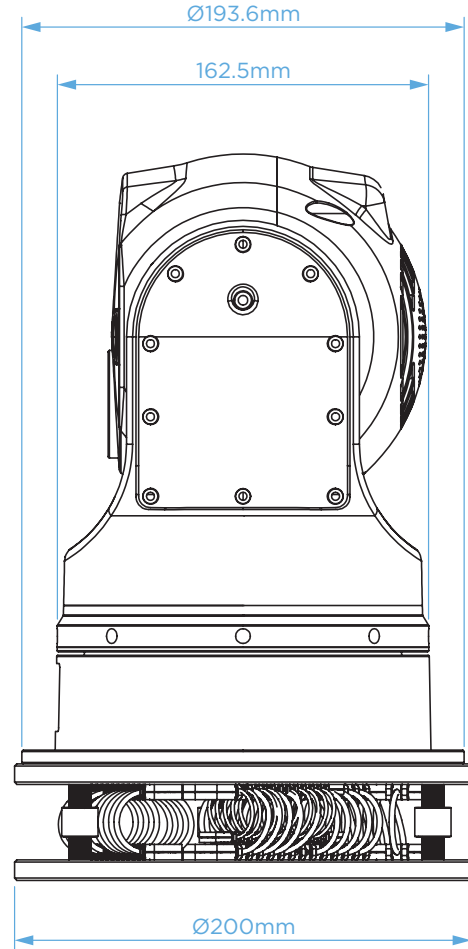


Rogue

DIMENSIONS & MOUNT PATTERN

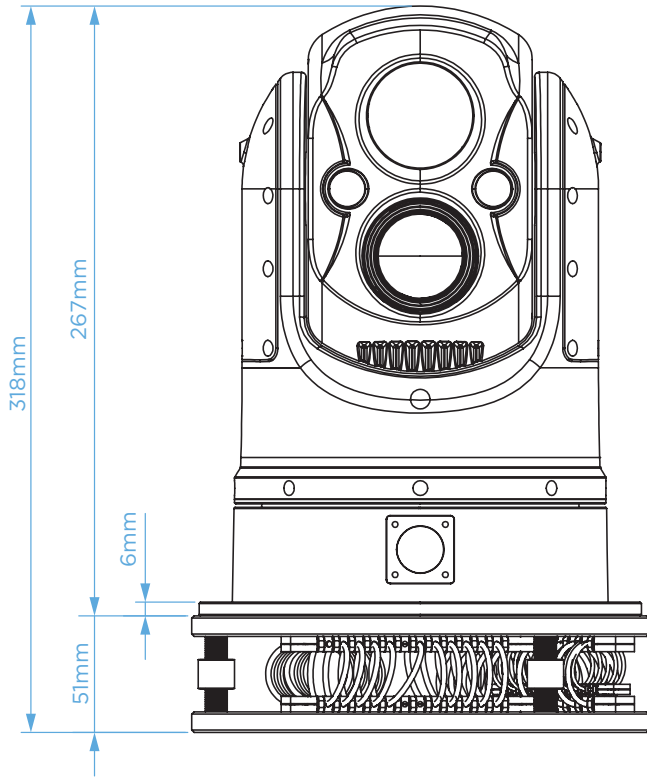

Mounting pattern for Rogue system to vibration mount

Mounting point for vibration mount to customer location